CHAPTER 6:APPENDIX

CONTENTS

1. Connectable Configuration ---------- 6-1

2. File location after software installation

1. Windows 3.1

1-1. PCL Driver ---------- 6-2

1-2. PS2 Driver ---------- 6-2

1-3. RisoRiSM ---------- 6-2

2. Windows 95

2-1. PCL Driver ---------- 6-5

2-2. PS2 Driver ---------- 6-5

2-3. RisoRiSM ---------- 6-5

3. DOS ---------- 6-7

4. Windows NT4.0

4-1. PCL Driver ---------- 6-8

4-2. PS2 Driver ---------- 6-8

5. Macintosh

5-1. QuickDraw ---------- 6-8

5-2. RiSMMac ---------- 6-8

5-3. MacPPD ---------- 6-8

3. SC5500 Main PCB (PCB OVERVIEW) ---------- 6-9

4. Test Print ---------- 6-10

5. Part List ---------- 6-11

1. Connectable Configuration

1-1. Non-Network Surroundings

HOST	PC/AT Compatible			Macintosh	
PORT	Parallel (IEEE1284)			Serial	LocalTalk
OS	DOS	Win3.1/95	WinNT4.0	System7.1/7.5	
DOS utility (*1)	Yes				
Status monitor utility		Yes			
PCL Driver	Yes	Yes	Yes	QD (*2)	
PS2 Driver (*3)	Yes	Yes	Yes		PPD

(*1)- Set up program and Status monitor utility

(*2)- Status monitor utility program included

(*3)- Option PS2 module must be installed

1-2. Network Surroundings

HOST	PC/AT Compatible	Macintosh
Client OS	Win NT4.0	System7.1/7.5
Network OS	Win NT4.0	System7.1/7.5
Protocol	TCP/IP	EtherTalk (*3)
PCL Driver	Yes	
PS2 Driver (*3)	Yes	Yes

(*3)- Option PS2 SIMM module must be installed

2. File location after software installation

1. Windows 3.1

1-1. PCL Driver for Windows 3.1

Location after installation	Comment	De-install
c:\windows\system\riso5e.drv	Device Driver	Yes(*1)
c:\windows\system\riso5e.hlp	Help file	Yes(*1)
c:\windows\system\riso5ea.dll	Dinamic Link Library	Yes(*1)
c:\windows\system\riso5ef.dll	Dinamic Link Library	Yes(*1)
c:\windows\system\riso5ef.hlp	Help file	Yes(*1)
c:\windows\system\riso5efl.dll	Dinamic Link Library	Yes(*1)
c:\windows\system\riso5es.dll	Dinamic Link Library	Yes(*1)
c:\windows\system\sumospin.dll	Dinamic Link Library	Yes(*1)
c:\windows\risosd.ini	Initialization file	Yes(*1)

1-2. PS2 Driver for Windows 3.1 (Option)

Location after installation	Comment	De-install
c:\windows\system\risops2.drv	Device Driver	No
c:\windows\system\risops2.hlp	Help file	No
c:\windows\system\risops2.ppd	PPD file	No
c:\windows\system\risops2.wpd	WPD file	No

1-3. RisoRiSM (Monitoring Control Software) for Win3.1

Location after installation	Comment	De-install
c:\risorism\help\sumowpsd.hlp	Help file	Yes(*1)
c:\risorism\psdbmp\200bmp.ini	Initialization file	Yes(*1)
c:\risorism\psdbmp\maful.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\main.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\maindat1.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\maindat2.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\maindat3.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainink.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainmas1.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainmas2.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainmas3.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainocup.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainopti.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainorig.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainpjam.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainpout.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mainpowe.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\majam.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\mrolout.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn1.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn11.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn12.bmp	Bitmapped Graphics file	Yes(*1)

Yes(*1)- Using Uninstall utility

1-3. RisoRiSM (Monitoring Control Software) for Win3.1

Location after installation	Comment	De-install
c:\risorism\psdbmp\sn13.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn14.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn15.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn16.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn17.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn176a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn176b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn176c.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn177.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_c.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_d.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_e.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_f.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_g.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_h.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_i.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_j.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn178_k.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn179a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn179b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn179c.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn179d.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn18.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn180a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn180b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn180c.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn180d.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn180e.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn180f.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn180g.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn180h.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn180i.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn181a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn181b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn181c.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn182a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn182b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn182c.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn183a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn183b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn183c.bmp	Bitmapped Graphics file	Yes(*1)

Yes(*1)- Using Uninstall utility

1-3. RisoRiSM (Monitoring Control Software) for Win3.1

Location after installation	Comment	De-install
c:\risorism\psdbmp\sn184a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn184b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn184c.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn185a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn185b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn185c.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn185d.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn186a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn186b.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn2.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn3.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\psdbmp\sn62a.bmp	Bitmapped Graphics file	Yes(*1)
c:\risorism\spool	Folder	Yes(*1)
c:\risorism\oemsetup.inf	Widows Setup file	Yes(*1)
c:\risorism\percent.dll	Dynamic Link Library	Yes(*1)
c:\risorism\riso5e.drv	Device Driver	Yes(*1)
c:\risorism\riso5e.hlp	Help file	Yes(*1)
c:\risorism\riso5ea.dll	Dynamic Link Library	Yes(*1)
c:\risorism\riso5ef.dll	Dynamic Link Library	Yes(*1)
c:\risorism\riso5ef.hlp	Help file	Yes(*1)
c:\risorism\riso5efl.dll	Dynamic Link Library	Yes(*1)
c:\risorism\riso5es.dll	Dynamic Link Library	Yes(*1)
c:\risorism\risosd.exe	DOS program file	Yes(*1)
c:\risorism\wsdelet.exe	DOS program file	No
c:\risorism\wssetup.inf	Widows Setup file	Yes(*1)

Yes(*1)- Using Uninstall utility

2. Windows95

2-1. PCL Driver for Windows95

Location after installation	Comment	De-install
C:\WINDOWS\SYSTEM\Riso5e.drv	Device Driver	Yes(*1)
C:\WINDOWS\SYSTEM\Riso5e.tmp	Temporary file	Yes(*1)
C:\WINDOWS\SYSTEM\Riso5ef.dll	Dynamic Link Library	Yes(*1)
C:\WINDOWS\SYSTEM\Riso5efl.dll	Dynamic Link Library	Yes(*1)
C:\WINDOWS\SYSTEM\Riso5es.dll	Dynamic Link Library	Yes(*1)
C:\WINDOWS\SYSTEM\Riso5e.hlp	Help file	Yes(*1)
C:\WINDOWS\SYSTEM\Riso5ef.hlp	Help file	Yes(*1)
C:\WINDOWS\SYSTEM\Riso5ea.dll	Dynamic Link Library	Yes(*1)
C:\WINDOWS\SYSTEM\Sumospin.dll	Dynamic Link Library	Yes(*1)
C:\WINDOWS\Risosd.ini	Initialization file	Yes(*1)

Yes(*1)- Using Uninstall utility

2-2. PS2 Driver for Windows95 (Option)

Location after installation	Comment	De-install
C:\WINDOWS\Risops2.wpx	WPX file	No
C:\WINDOWS\SYSTEM\Risops2.spd	SPD file	Yes
C:\WINDOWS\SYSTEM\Pscript.hlp	Help file	Yes
C:\WINDOWS\SYSTEM\Pscript.inf	Windows Setup file	Yes
C:\WINDOWS\SYSTEM\Testps.txt	Text file	Yes
C:\WINDOWS\SYSTEM\Fonts.mfm	MFM file	Yes

2-3. RisoRiSM (Monitoring Control Software) for Win95

Location after installation	Comment	De-install
C:\Risorism\Help\Sumowpsd.hlp	Help file	Yes(*1)
C:\Risorism\Psdbmp\200bmp.ini	Initialization file	Yes(*1)
C:\Risorism\Psdbmp\Maful.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Main.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Maindat1.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Maindat2.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Maindat3.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainink.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainmas1.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainmas2.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainmas3.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainocup.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainopti.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainorig.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainpjam.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainpout.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Mainpowe.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Majam.bmp	Bitmapped Graphics file	Yes(*1)

Yes(*1)- Using Uninstall utility

2-3. RisoRiSM (Monitoring Control Software) for Win95

Location after installation	Comment	De-install
C:\Risorism\Psdbmp\Mrolout.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn1.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn11.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn12.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn13.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn14.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn15.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn16.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn17.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn176a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn176b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn176c.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn177.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_c.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_d.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_e.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_f.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_g.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_h.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_i.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_j.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn178_k.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn179a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn179b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn179c.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn179d.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn18.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn180a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn180b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn180c.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn180d.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn180e.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn180f.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn180g.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn180h.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn180i.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn181a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn181b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn181c.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn182a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn182b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn182c.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn183a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn183b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn183c.bmp	Bitmapped Graphics file	Yes(*1)

Yes(*1)- Using Uninstall utility

2-3. RisoRiSM (Monitoring Control Software) for Win95

Location after installation	Comment	De-install
C:\Risorism\Psdbmp\Sn184a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn184b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn184c.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn185a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn185b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn185c.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn185d.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn186a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn186b.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn2.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn3.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Psdbmp\Sn62a.bmp	Bitmapped Graphics file	Yes(*1)
C:\Risorism\Spool	Folder	Yes(*1)
C:\Risorism\Meter32.dll	Dynamic Link Library	Yes(*1)
C:\Risorism\Oemsetup.ini	Widows Setup file	Yes(*1)
C:\Risorism\Riso5e.drv	Device Driver	Yes(*1)
C:\Risorism\Riso5e.hlp	Help file	Yes(*1)
C:\Risorism\Riso5ea.dll	Dynamic Link Library	Yes(*1)
C:\Risorism\Riso5ef.dll	Dynamic Link Library	Yes(*1)
C:\Risorism\Riso5ef.hlp	Help file	Yes(*1)
C:\Risorism\Riso5efl.dll	Dynamic Link Library	Yes(*1)
C:\Risorism\Riso5es.dll	Dynamic Link Library	Yes(*1)
C:\Risorism\Risosd.exe	DOS program file	Yes(*1)
C:\Risorism\Wsdelet.exe	DOS program file	No
C:\Risorism\Wssetup.inf	Widows Setup file	No

Yes(*1)- Using Uninstall utility

3. DOS

Location after installation	Comment	De-install
C:\RUTYDOS\Delrismd	Folder	No
C:\RUTYDOS\Dhp	Folder	No
C:\RUTYDOS\Dhpicon.dat	Data file	No
C:\RUTYDOS\Dhpobj.dat	Data file	No
C:\RUTYDOS\Egavga.bgi	File	No
C:\RUTYDOS\Rep	Folder	No
C:\RUTYDOS\Replist.msg	Message file	No
C:\RUTYDOS\Rismodos	Folder	No
C:\RUTYDOS\RiSMDOSH.MSG	Message file	No
C:\RUTYDOS\RiSMDOSS.MSG	Message file	No
C:\RUTYDOS\Rutydos	Folder	No
C:\RUTYDOS\Rutydos.msg	Message file	No
		No

4. WindowsNT4.0

4-1. PCL for WindowsNT4.0

Location after installation	Comment	De-install
C:\Winnt\system32\spool\drivers\w32x86\2\Rasdd.dll	Dynamic Link Library	No
C:\Winnt\system32\spool\drivers\w32x86\2\Rasddui.dll	Dynamic Link Library	No
C:\Winnt\system32\spool\drivers\w32x86\2\Rasddui.hlp	Help file	No
C:\Winnt\system32\spool\drivers\w32x86\2\Riso.dll	Dynamic Link Library	No
C:\Winnt\system32\spool\drivers\w32x86\Rasdd.dll	Dynamic Link Library	No
C:\Winnt\system32\spool\drivers\w32x86\Rasddui.dll	Dynamic Link Library	No
C:\Winnt\system32\spool\drivers\w32x86\Rasddui.hlp	Help file	No
C:\Winnt\system32\spool\drivers\w32x86\Riso.dll	Dynamic Link Library	No

4-2. PS2 for WindowsNT4.0 (Option)

Location after installation	Comment	De-install
C:\Winnt\system32\spool\drivers\w32x86\2\Pscript.dll	Dynamic Link Library	No
C:\Winnt\system32\spool\drivers\w32x86\2\Pscript.hlp	Help file	No
C:\Winnt\system32\spool\drivers\w32x86\2\Pscriptui.dll	Dynamic Link Library	No
C:\Winnt\system32\spool\drivers\w32x86\2\Risops2.bpd	BPD file	No
C:\Winnt\system32\spool\drivers\w32x86\2\Risops2.ppd	PPD file	No
C:\Winnt\system32\spool\drivers\w32x86\Pscript.dll	Dynamic Link Library	No
C:\Winnt\system32\spool\drivers\w32x86\Pscript.hlp	Help file	No
C:\Winnt\system32\spool\drivers\w32x86\Pscriptui.dll	Dynamic Link Library	No
C:\Winnt\system32\spool\drivers\w32x86\Risops2.ppd	PPD file	No

5. RISO SC5500 RisoQD

5-1. QuickDraw

Location after installation	Comment	De-install
System Folder : Extentions : RISO SC5500 Launcher	System extension	No
System Folder : Extentions : RISO SC5500 RisoQD	Chooser extension	No
System Folder : Preference : RISO SC5500 RisoQD	Folder	No

5-2. RiSMMac

Location after installation	Comment	De-install
System Folder : RisoRiSM Mac	Application program	No
System Folder : Preference : RISO SC5500 RisoQD : TestPage RISO	RisoRiSM Mac document	No

5-3. MacPPD (Option)

Location after installation	Comment	De-install
System Folder : Extentions : Printer Descriptions (Must copy the file manually)	Mac PPD	No

3. SC5500 Main PCB

PCB OVERVIEW

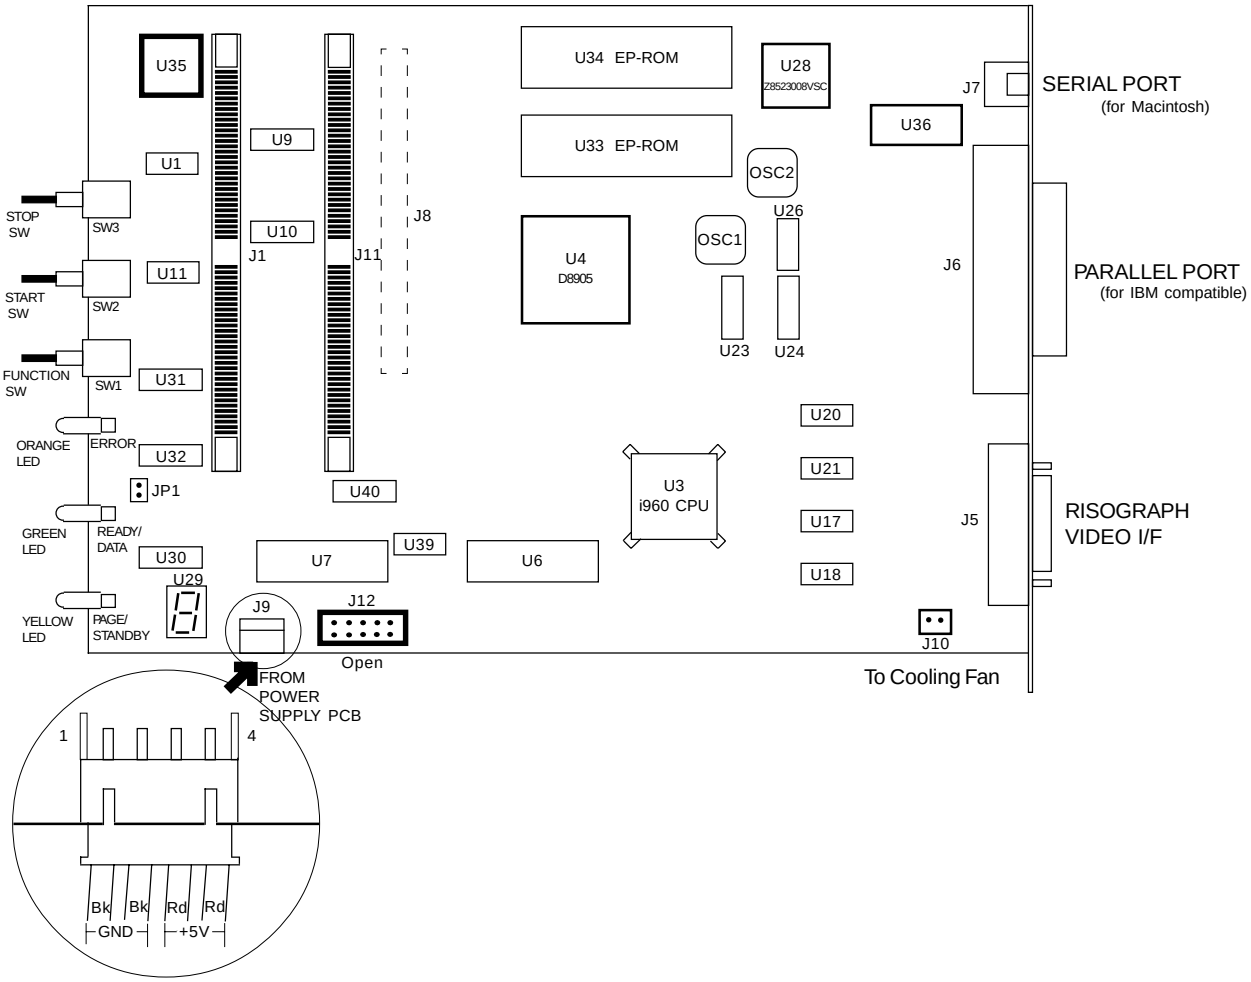

FUNCTION OF MAIN COMPONENTS

Circuit ID No.		Part Name	Function
U3	CPU	NG80960KB-25	Central Processing Unit (25MHz)
U4	ASIC	D8905 PQFP	CPU-Memory bridge
U33,U34	ROM	MX23C8100PC-12	Store Main Program
U6,U7	DRAM	M5M418160	4MB Memory
U28	SCC	Z85230-08VSC	Mac Control
U2	RESET IC	M51953BL	Reset IC
U14	NVRAM	BR24C04F	Store current status
U26	Logic IC	74F74	Dual D-FFs with Preset and Clear
U1,U11	Logic IC	74LS19	Hex Schmitt Trigger Inverters
U9,U10	Logic IC	74ALS245	Octal 3-State Bus Transceivers
U32	Logic IC	74LS541	Octal 3-State Buffer
U23,U24	Logic IC	74ACT1284	Quad 2 Input NOR Line Driver
U30,U31	Logic IC	74HCT273	Octal D-FFs
U40	Logic IC	74LS540	Octal 3-State Buffer (Inverted)
U39	Logic IC	74LS06	Hex O.C. Inverters
U20,U21	Receiver	26LS32	Risograph Interface
U17,U18	Driver	26LS31	Risograph Interface
U35	PLD	GAL16V8B-10LJ	Network Control
U36	Receive/Drive	LTC1323CSW	Mac Driver IC

4. Test Print (Self Test)

The SC5500 forwards the internally equipped image data to Risograph directly, and does the Master-making and Printing.
When an error occurs, we can judge from this Test Print whether or not the Risograph is in a normal condition.
If the test prints come out correctly, the Risograph is in a good condition.
The Test Print image is in A4 size.

Procedures for the Test Print

1) Confirm the connection between the SC5500 and Risograph, and then turn ON the Risograph.

2) Pressing the "START" key of the SC5500, turn ON the power of the SC5500, and keep the "START" key pressed until the Orange and Yellow LEDs goes off.

3) The Green LED lights up while the Test Print image data within the SC5500 is being processed.

4) The Yellow LED lights up when the Test Print data processing is completed. The Risograph starts the Master-making, followed by a proof print and the first print.

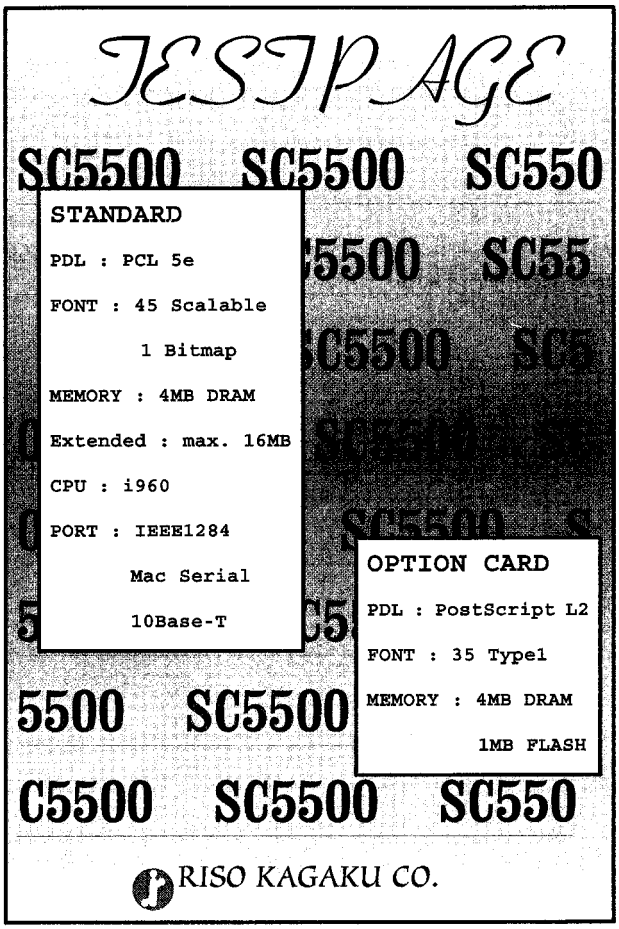

5. Parts List

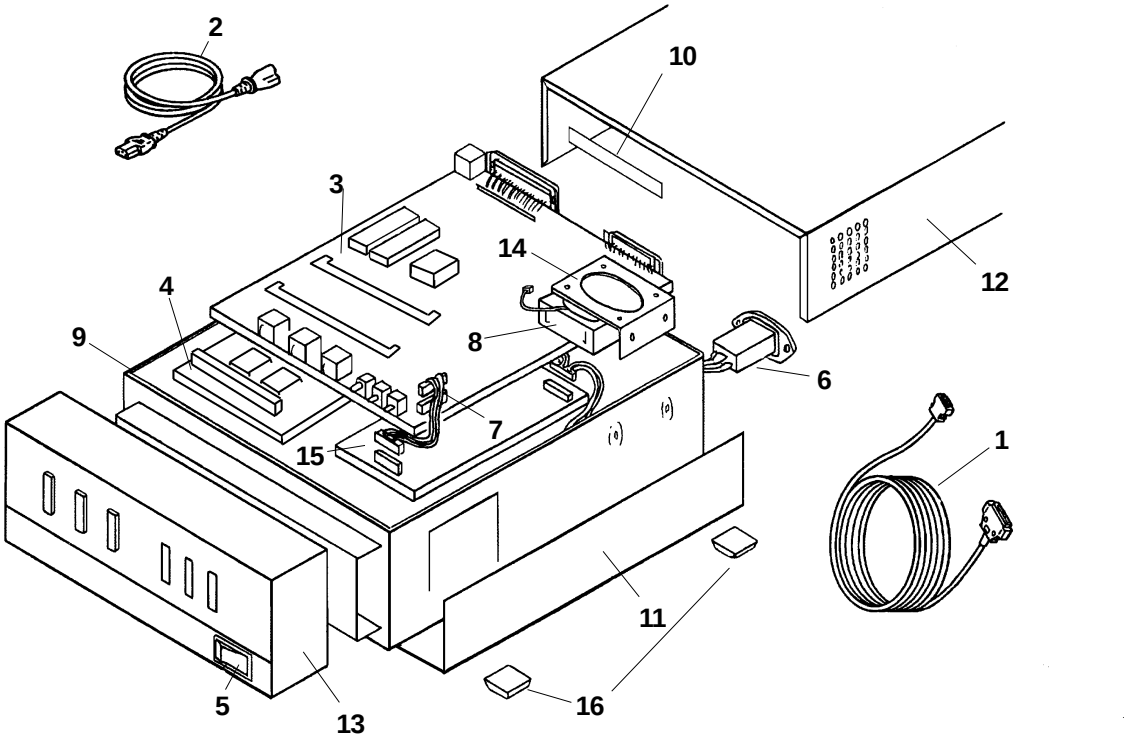

	Part No.		Part Name	SC3000 Compatibility
1	101-55000-002	1	SCII Cable(Video Cable); 10m	Yes
2	488-00014-100	1	Power Cord;US	Yes
	488-00015-106	1	Power Cord;EU	Yes
3	101-51019-000	1	Main PCB;SC5500	New for SC5500
4	101-51018-004	1	Network PCB;SC5500	New for SC5500
5	101-55010-105	1	Power Switch w/Wire-Harness	Yes (Suffix change)
6	101-55011-101	1	Inlet Terminal w/Wire-Harnwss	Yes
7	101-55005-101	1	Wire-Harness;Main-Power	Yes
8	101-55006-108	1	Cooling Fan	Yes
9	101-18021-008	1	Chassis for SC5500	New for SC5500
10	101-18002-003	1	Back Plate	Yes
11	101-18003-107	1	Lower Case	Yes
12	101-18004-006	1	Upper Case	Yes
13	101-90027-002	1	Panel Front Cover;SC5500	New for SC5500
14	101-18008-206	1	Bracket;Cooling Fan	Yes (Suffix change)
15	101-51001-004	1	Power Supply PCB;SC3000	Yes
16	101-18010-006	4	Rubber Foot	Yes
	101-80034-000	1	Software CD-Rom for SC5500	New for SC5500
	Optional Part			
	101-51021-005	1	SIMM 8MB;SC5	New for SC5500
	101-51020-009	1	PS2 SIMM Module	New for SC5500
	101-80040-000	1	Software CD-Rom for PS2	New for SC5500